

Exploded view diagram of the front panel of a microwave oven, showing various components and their assembly points. The diagram includes two views of the front panel: the top view shows the control panel with buttons and a digital display, and the bottom view shows the door panel with a handle and lock. Components are labeled with numbers 28 through 38. Red arrows indicate the assembly points for each component.

- 28: Main front panel/control panel
- 29: Control panel bezel
- 30: Control panel bezel (right side)
- 31: Control panel bezel (left side)
- 32: Control panel bezel (bottom)
- 33: Control panel bezel (top)
- 34: Control panel bezel (middle)
- 35: Control panel bezel (right side)
- 36: Control panel bezel (bottom)
- 37: Control panel bezel (top)
- 38: Control panel bezel (middle)