GLY35AA

COMPRESSOR

TECHNICAL SPECIFICATION

 $(220-240V\sim50Hz)$

CHANGHONG HUAYI COMPRESSOR CO., LTD.

INDEX

	Page	е
1、	Compressor Type2	
2,	Performance Data2	
3、	Running Condition	
4,	Compressor Mechanical Information3	
5、	Compressor Shape3	
6、	Wiring Diagram4	
7、	Fixing of mounting bracket and cabinet base4	
8,	Assembly of starter and protector5	
9、	Delivery State6	
10	Package Storage and Transportation6	
11,	Technical Items	

1. Compressor Type

Compressor model	GLY35AA
Rated voltage/frequency	220240V~50Hz
Refrigerant	R134a
Application	Low back pressure (LBP)
Cooling method	ST
Control device	Capillary tube
Motor type	RSIR(PTC)
Capacitor	/
Start (Auxillary) & Run (Main) winding resistance (Ω)	36&11.55
Material used in Start (Auxillary) & Run (Main) winding	Al &Al

2. Performance Data (220V/50Hz)

Displ.(cm ³)	Capacity(W)	Inp.Pow.(W)	Rated Current(A)	COP (W/W)
Dispi.(ciii)	≥95%	≤115%	≤110%	≥95%
3.5	90	90	0.64	1.0

Testing condition:

Test conditions	LBP	
Test conditions	ASHRAE	
Evaporating Temp.	-23.3℃	
Ambient Temp.	32.2℃	
Condensing Temp.	54.4℃	
Suction Temp.	32.2℃	
Subcooling Temp.	32.2℃	


3. Running Condition

Ambient temp.	10~43℃
Evaporating temp.	-35∼-15℃
Voltage range	187~254V
Max. condensing temp.	65℃
Max. winding temp.	130℃
Max. shell temp.	95℃
Max. discharge temp.	125℃


4. Compressor Mechanical Information

Oil type	POE
Oil charged	120±10ml
Diameter of suction tube (I.D.)	Φ6.5±0.1mm
Diameter of discharge tube(I.D.)	Φ4.9±0.1mm
Diameter of process tube (I.D.)	$\Phi 6.5 \pm 0.1$ mm
Material of suction tube, process tube and	
discharge tube	copper Tube
Compressor noise	≤41dB(A)
Vibration	$\leq 0.8 \text{m/s}^2$

5. Compressor Shape

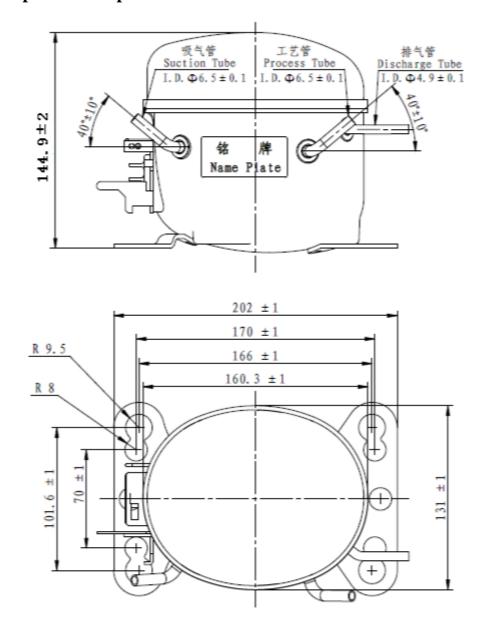


6. Wiring Diagram

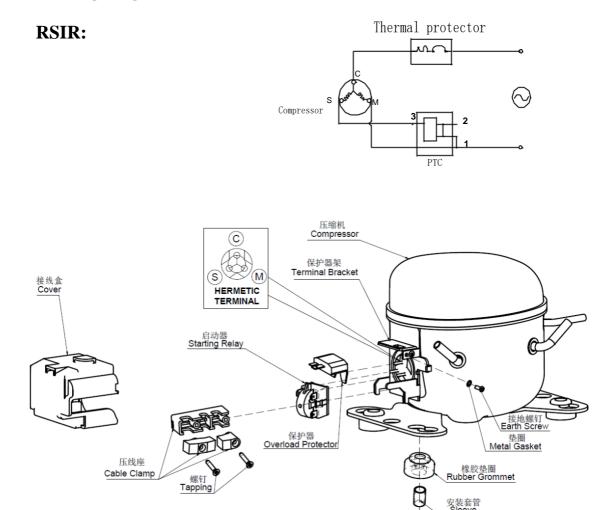

Note: Each of the starting relay, the thermal protector, the terminal cover and the screw assembly is separately provided by our company.

7. Fixing Of Mounting Bracket And Cabinet Base

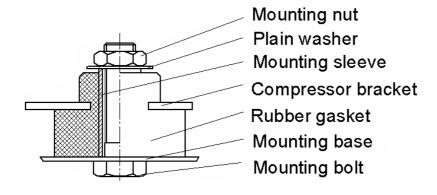

8. Assembly of starter and protector


8.1 Starting relay


Model: QP2-12/B3
Type: Starting relay
max current: 8A

max working voltage:350 V Flammability: Anti-flammability

Manufacturer: Hangzhou Xingshuaier Electric Appliance Co.LTD

Guangzhou Senbao Electric Appliance Co.LTD

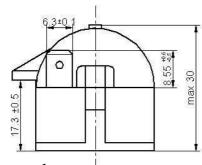

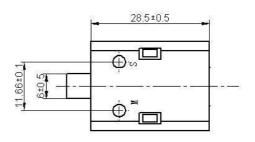


8.2 Thermal protector


Model: DRB15P69A2/BT38-125

Compressor model		НҮВЗ5Ү а	
	Max.T.C Amp.(25°C) A	3.8	
	Trip time S	6∼14	
Thermal	Reset time S	30~150	
Protector	Open temp. $\pm 5^{\circ}$ C	125	
	Close temp. $\pm 9^{\circ}$ C	61	
	Min. T.C. Amp.(70°C) A	0.95~1.20	

Flammability: Anti-flammability

Manufacturer: Hangzhou Xingshuaier Electric Appliance Co.LTD
Guangzhou Senbao Electric Appliance Co.LTD

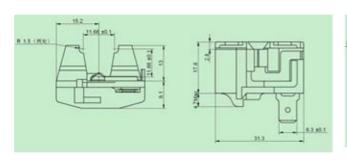

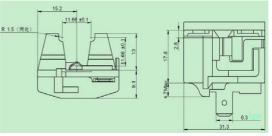



9. Delivery State

No.	Name	Model	Quantity	CODE
1.	Compressor	GLY35AA	1pcs	
2.	MOUNTING ACCESSORIES			
2.1.	Rubber Gasket		4 pcs	CTE938-2A
2.2.	Mounting Sleeve		4 pcs	СТЕ943-4
3.	ELECTRICAL ACCESSORIES			
3.1.	Starting Relay	QP2-12/B3	1 pcs	
3.2	Thermal Protector	DRB15P69A2/ BT38-125	1 pcs	
3.3	Cable clamp	With 2 clamps and screw	1 pcs	E.24.02.202
3.4	Plastic cover		1 pcs	B.24.01.59XL
3.5	Screw Assembly		1 pcs	E.14.24.201

Notes: 1.All electrical parts and equipment assembly are supplied separately, not installed on the compressor.

2. All electrical parts and equipment assembly according to Delivery states are all provided by our company.

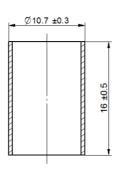

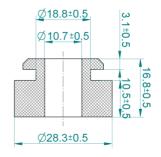

10. Package, Storage and Transportation

Package type	unreusable	
Quantity	105pcs/box	
Transportation	By truck or train	
Storage	Max. 2 layers	
Volume m ³	0.90	
Dimension: length×width×height (mm)	1120*820*980	
Main components	Wooden supporter, plastic sheet, cardboard cover, wrapping	
Movement	Keep the compressor in normal or vertical position (a short time before compressor installed in the refrigerator).	
Trans. test requirement	No allowable compressor's damage and performance loss.	

11. Technical Items

- 1. After pulling off rubber plugs from the compressor tubes, please connect the compressor to the refrigeration system within 5 minutes. It is advisable to take off the first plug from process tube. No dust or humidity in the air is permitted to enter the compressor.
- 2. Earth connection should be fixed permanently and reliably.
- 3. The compressor must be mounted horizontally without tilting an angle more than 5° .
- 4. Maximum operating ambient temperature is at 43°C.
- 5. When the compressor starts, balance pressure inside refrigeration system must be less than 0.5Mpa (Absolute).
- 6. The compressor must not be restarted unless at an interval of more than 5 minutes.
- 7. Please keep the compressor always vertically and never upset it during transportation while avoiding any vibration and shock.
- 8. Please store the compressor in a dry and ventilated place and keep it away from any humidity.
- 9. Please follow the transportation warning marks on the package for layer limitation. Do not roll the whole packages when loading or unloading.
- 10.Storage expiry is 6 months from the date of production. If it expired, please check the nitrogen pressure inside compressor and recharge it when it is necessary.